

CANON 750D



FEATURES:

- 24MP - APS-C CMOS Sensor
- ISO 100 - 12800
- 3" Fully Articulated Screen
- 5.0 fps continuous shooting
- 1920 x 1080 video resolution
- Capture movies at up to 1080p resolution and 30fps frame rate with microphone input.

PARTS OF THE CAMERA



SETTING UP THE CAMERA

1. Battery placement

Make sure that the power switch is off. Insert the battery into the battery compartment. (See figure below)



Insert the battery as indicated by the arrow

2. Inserting the SD Card

- Open the SD card compartment cover. Insert the SD Card into the SD Card as the figure below. To remove the SD Card, SD Card inward, the card will pop out.



shown in
press the

3. Set Mode to M (Manual) Toggle the switch to ON

MANUAL



POWER

4. Reset Camera Settings

Press MENU button

Setup → Swipe to 4th setting → Select Clear Settings using SET button
→ Clear all Camera Settings → OK

MENU





SET

5. Format the SD Card

Press MENU



Setup → Format Card → Select OK

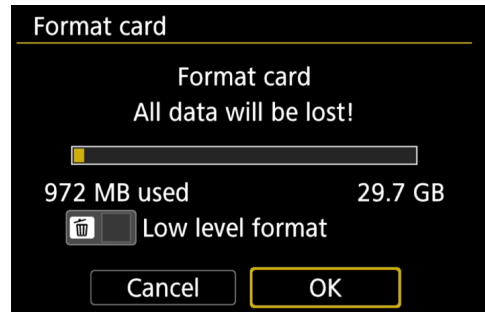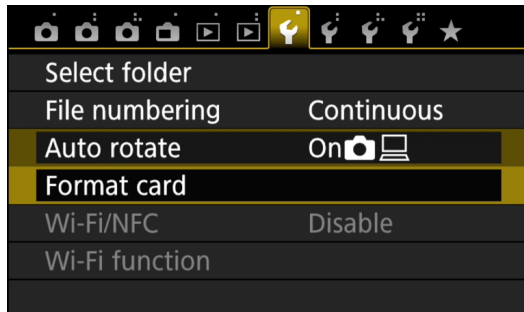

6. Image Quality


Press MENU

Navigate in SHOOT Menu → Set to RAW + L

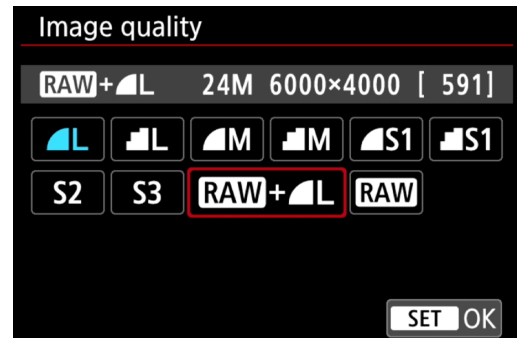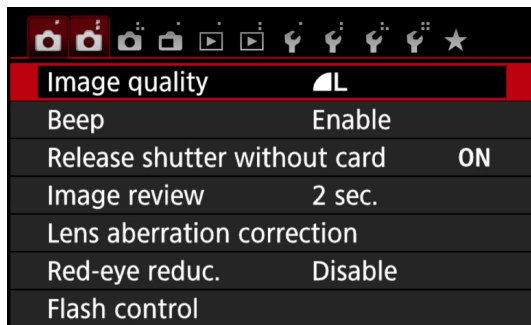


7. Set ISO

Press ISO Button → Set to ISO using the Main Dial

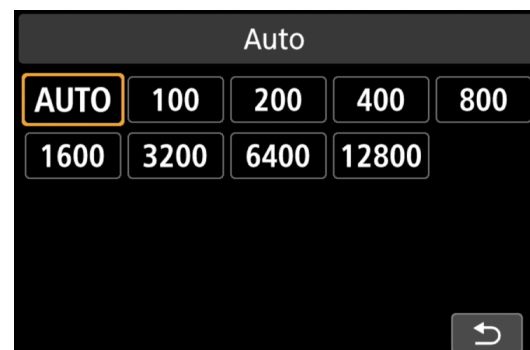

8. Set Aperture

Press Quick Menu Button → Select Aperture and SET


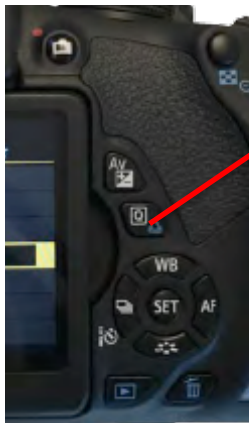


Quick Menu



9. Set Shutter Speed

Press Quick Menu Button → Select Aperture and SET

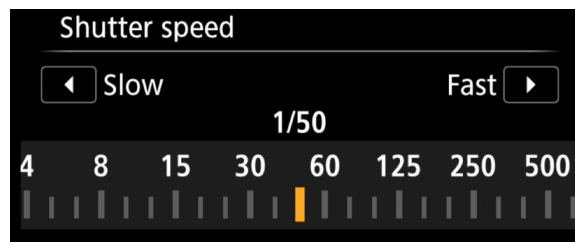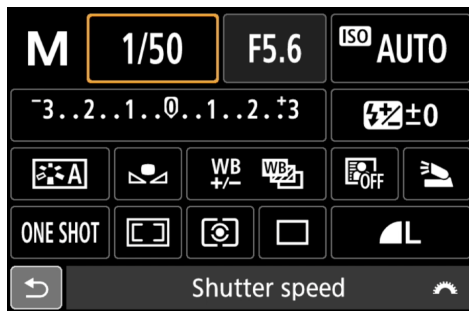


10. Set White Balance

Press WB Button → Set White Balance



White Balance

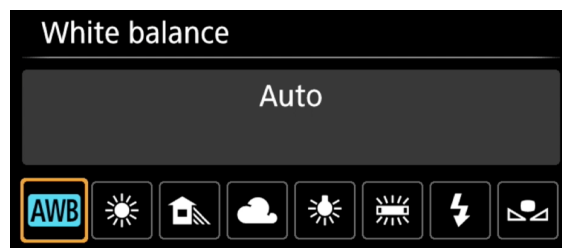

For Video Recording

1. Toggle to Video Mode





Video Mode

2. Set Video System

Press MENU

Setup → Video System → Set to **PAL**

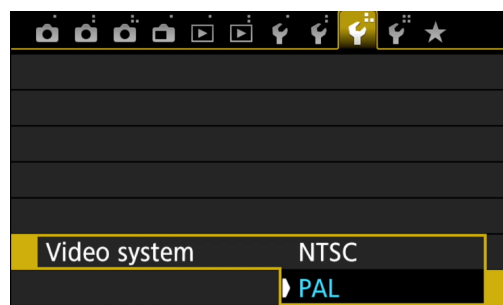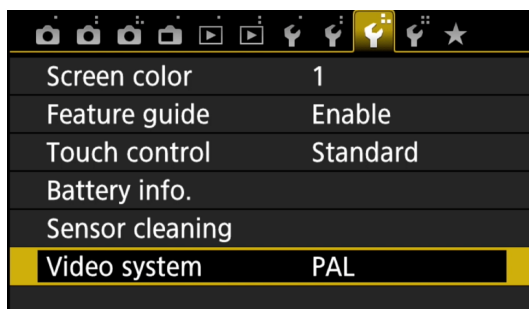

3. Set Movie Rec. Size

Press MENU

Movie Setup → Movie rec. size → Set to **1920x1080 25fps**

