


## CANON 850D



### FEATURES:

- 24MP - APS-C CMOS Sensor
- ISO 100 - 25600
- 3" Fully Articulated Screen
- 5.0 fps continuous shooting
- 4K video resolution

PARTS OF THE CAMERA

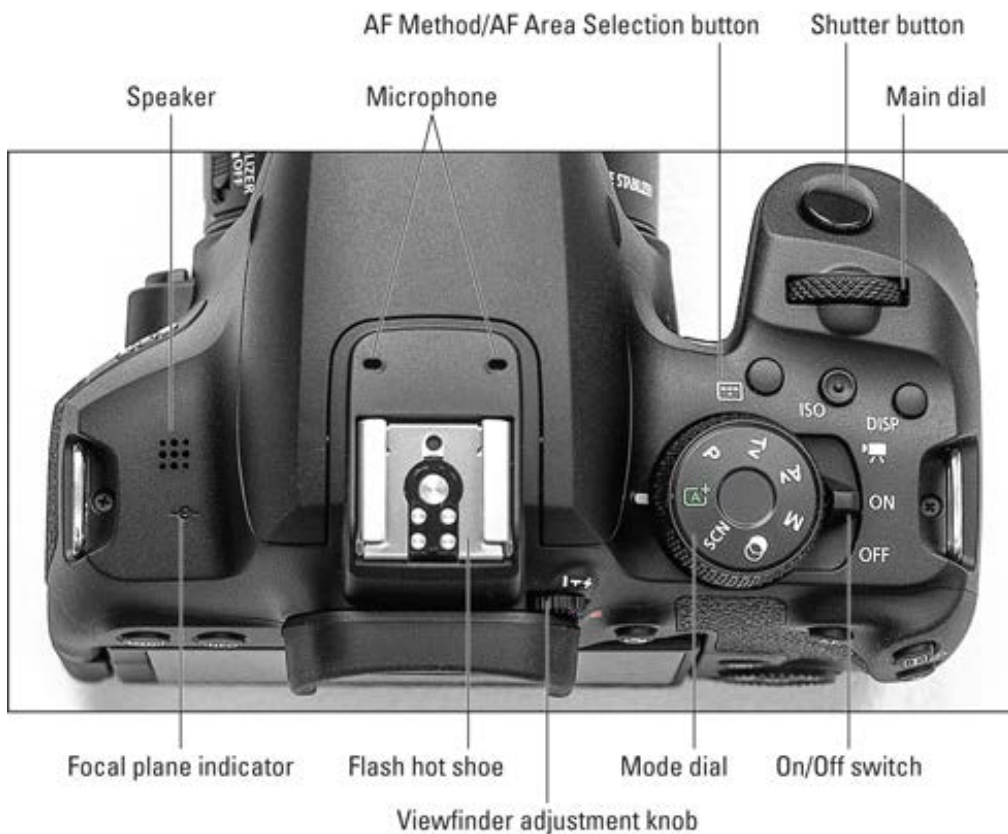

## SETTING UP THE CAMERA

### 1. Battery placement

Make sure that the power switch is off. Insert the battery into the battery compartment. (See figure below)



Insert the battery as indicated by the arrow

### 2. Inserting the SD Card

- Open the SD card compartment cover. Insert the SD Card into the SD Card as shown in the figure below. To remove the SD Card, press the SD Card inward, the card will pop out.



### 3. Set Mode to M (Manual) Toggle the switch to ON



### 4. Reset Camera Settings

Press MENU button



Function Settings → Swipe to 5<sup>th</sup> setting → Select Clear Settings using SET button → Clear all Camera Settings → OK



5. Format the SD Card

Press MENU


Function Setting → Format Card → Select OK

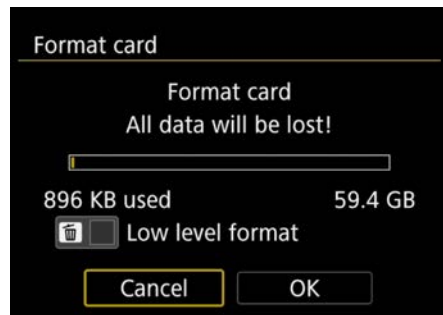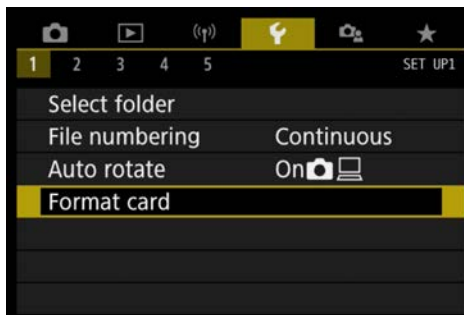

6. Image Quality


Press MENU

SHOOT Menu → Image Quality - Set to RAW + L (or depending on your requirement)

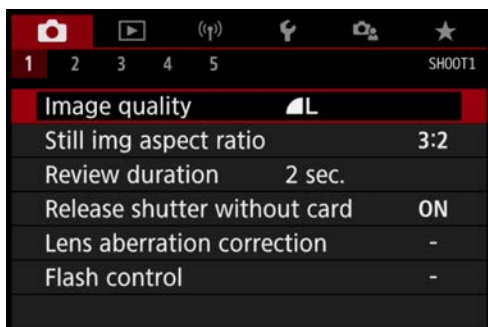

7. Set ISO

Press ISO Button → Set to ISO using the Main Dial

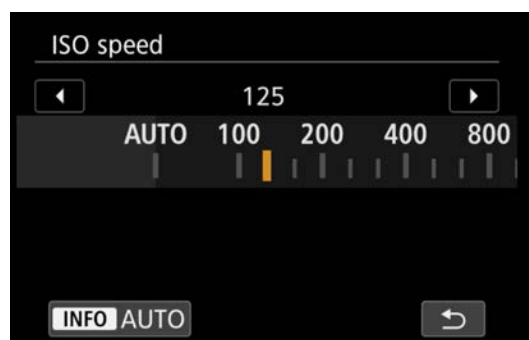


8. Set Aperture

Press Quick Menu Button → Select Aperture and SET





Quick  
Menu

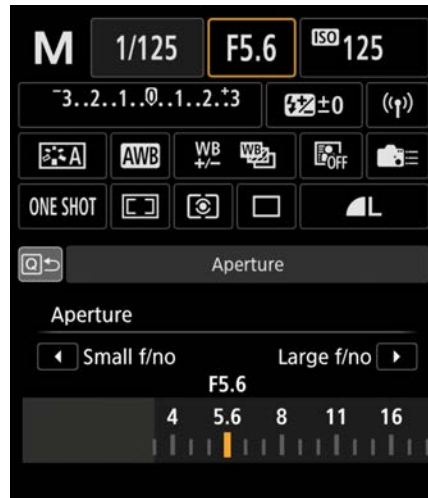

9. Set Shutter Speed

Press Quick Menu Button → Select Aperture and SET

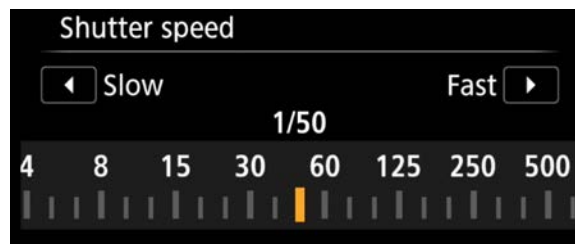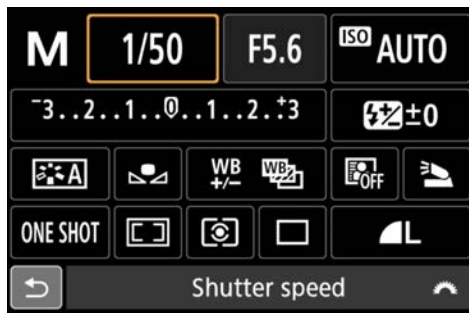


10. Set White Balance

Press WB Button → Set White Balance



White  
Balance


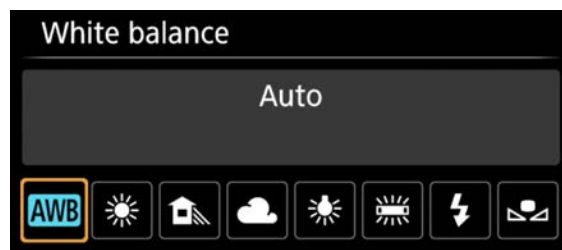


## For Video Recording

1. Toggle to Video Mode



2. Set Video System  
Press MENU  
Setup → Video System → Set to **PAL**

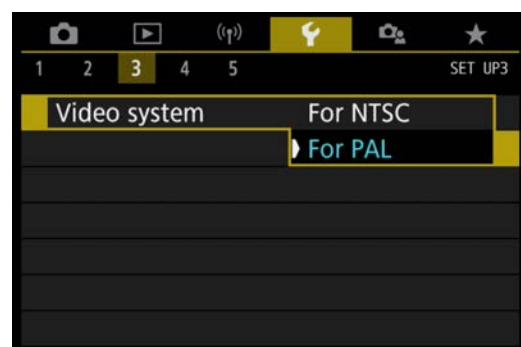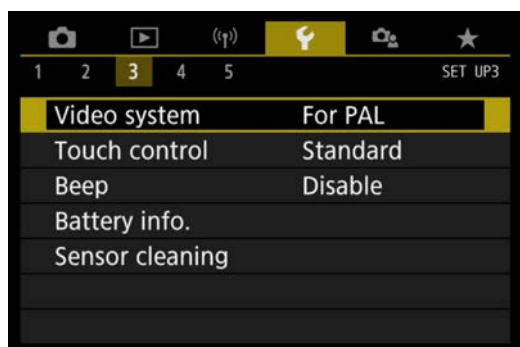

3. Set Movie Rec. Size  
Press MENU  
Movie Setup → Movie rec. size → Set to **1920x1080 25fps**

