


QUICK START GUIDE CANON 5D MARK III

FORMAT THE CARD

Turn ON the Camera

Press MENU → Go to SETUP → Format → Card 1 or Card 2 → Press SET → OK

SETTING UP YOUR CAMERA

1. **Reset Camera Settings**
Press MENU button → Navigate to Setup → Camera user settings → Clear Settings → OK
2. **Movie Format (Switch to Video Mode)**
Press MENU → Navigate to SHOOT4:Movie → Movie rec. size → Select 1920x1080 @ 25fps ALL-I
3. **Video System**
Press MENU → Navigate to SETUP3 → Video System → PAL
4. **Image Quality**
Press MENU → Navigate to SHOOT1 → Image Quality → Select RAW +  → Press SET
5. **Set the Mode Dial to M (Manual)**
6. **Set the Shutter Speed to 1/50**
7. **Set the ISO / Gain**
8. **Set the Aperture**
9. **Set White Balance**
10. **Set the Focus**