

Canon 700D



Features:

- 18MP APS-C 'Hybrid CMOS' sensor
- Phase detection AF from imaging sensor for Live View and Video
- Continuous autofocus in movie mode with subject tracking
- 14-bit DIGIC 5 processor
- ISO 100-12800 standard, 25600 expanded
- 9 point AF system
- 1080p30 video recording with built-in stereo mics
- Touch-sensitive vari-angle ClearView II LCD (capacitive type, multi-touch support)

SETTING UP THE CAMERA

1. Battery placement

Make sure that the power switch is off. Insert the battery into the battery compartment. (See figure below)



Insert the battery as indicated by the arrow

2. Inserting the SD Card

- Open the SD card compartment cover.

Insert the SD Card into the SD Card as shown in the figure below. To remove the SD Card, press the SD Card inward, the card will pop out.



- 3. Set the Mode Dial to M (Manual Mode)
- 4. Toggle the switch to ON





5. Reset Camera Settings

Press MENU button

Setup Swipe to 4th setting Select Clear Settings using SET button



Clear all Camera Settings OK

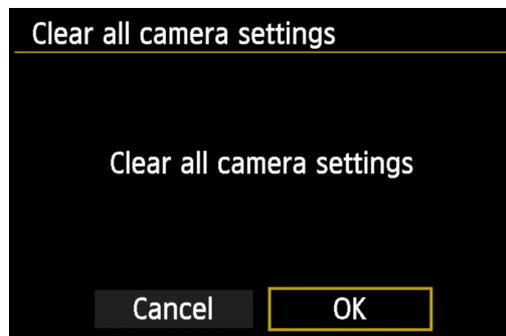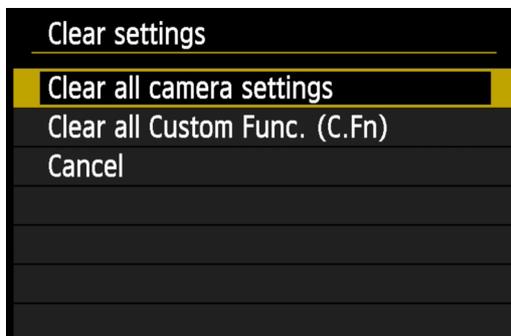

6. Format the SD Card

Press MENU

Setup Format Card Select OK

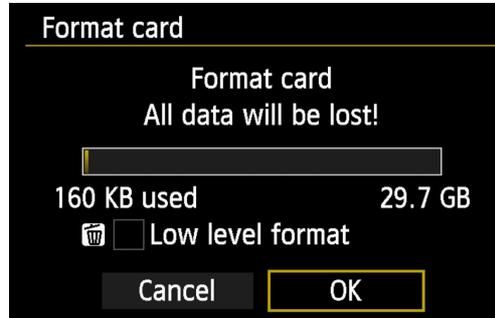
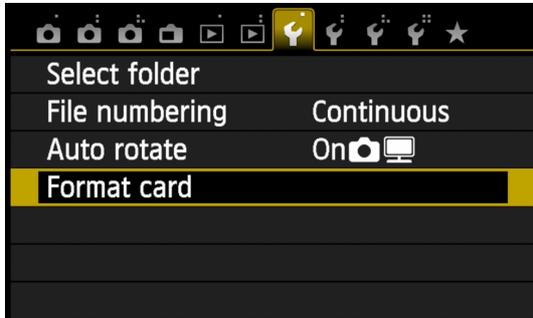


7. Image Quality

Press MENU

Navigate in SHOOT Menu


Set to RAW + L

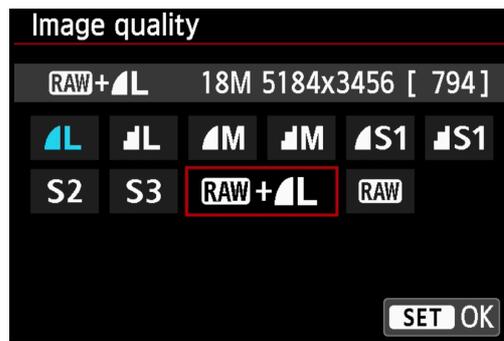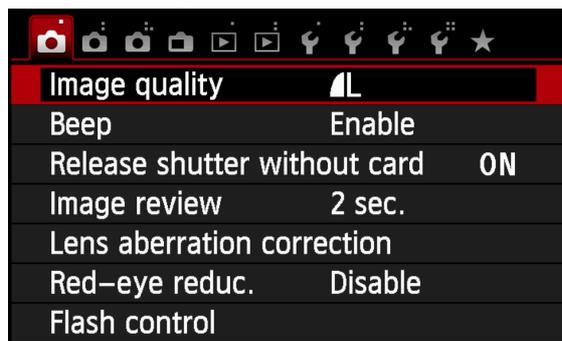

8. Set ISO

Press ISO Button

Set to ISO using the Main Dial

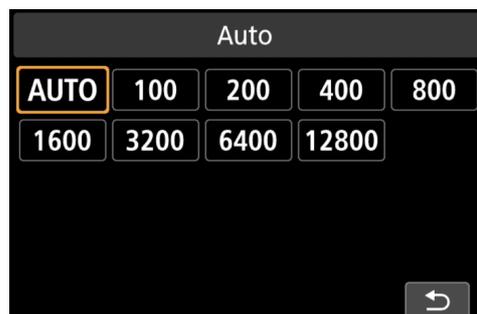



9. Set Aperture

Press Quick Menu Button




Quick
Menu

Select Aperture and SET

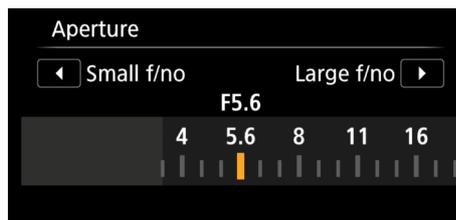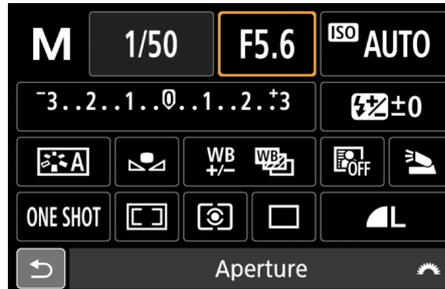


10. Set Shutter Speed

Press Quick Menu Button

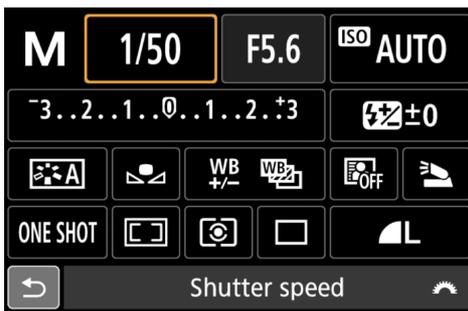

Select Aperture and SET

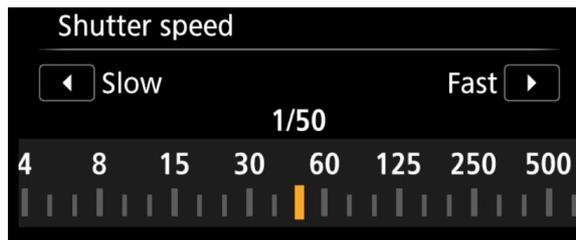


11. Set White Balance

Press WB Button

Set White Balance



White
Balance

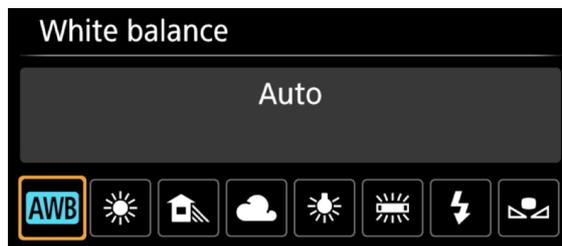


1. Toggle to Video Mode



2. Set Video System

Press MENU

Setup Video System Set to **PAL**

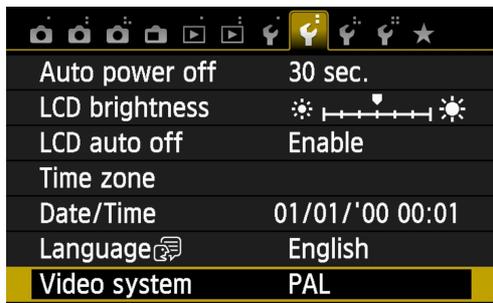

3. Set Movie Rec. Size

Press MENU

Movie Setup Movie rec. size Set to **1920x1080 25fps**

