

## QUICK START GUIDE PANASONIC HPX-171

### **FORMAT THE CARD**

Turn ON the camera

Press MENU → Card Functions → SD Card Format → YES → Completed → Press again MENU

to exit **SETTING UP YOUR CAMERA**

1. Reset Settings  
Press MENU → OTHER FUNCTIONS → MENU INIT → YES
2. Movie Format  
Press MENU → RECORDING SETUP → REC FORMAT → 1080i/25p
3. Set the Shutter Speed to 1/50 by setting Shutter Speed to OFF
4. Set the IRIS (Aperture)
5. Set the ND Filter
6. Set White Balance
7. Set the FOCUS
8. Set Audio  
You can use the internal microphone (INT) or an external microphone for your audio. Switch to MIC if the microphone is patched directly to the audio input of the camera and use LINE if a mixer or an external recorder's output is connected to the audio input of the camera. Turn on the +48V Phantom Power when using condenser microphone (ex: shotgun microphone)