


Zoom H4n Pro




- Four-track simultaneous recording
- Built-in X/Y stereo microphones, adjustable between 90° and 120°
- Two mic/line level inputs with XLR/TRS combo connectors
- +48V phantom power for main inputs
- Records directly to SD and SDHC cards up to 32 GB
- Supports up to 24-bit/96 kHz audio in BWF-compliant WAV or a variety of MP3 formats
- Mounts to mic stand or tripod, or directly to DSLR with optional Hot Shoe adapter
- Runs on 2 standard AA alkaline or NiMH rechargeable batteries with up to 6 hours of operation (up to 10 hours in Stamina mode)

1. Inserting and removing SD card

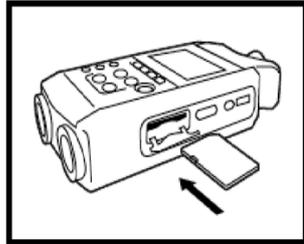


To insert the SD Card:

1. Make sure the Power is OFF.
2. Insert SD card into the SD Card slot.

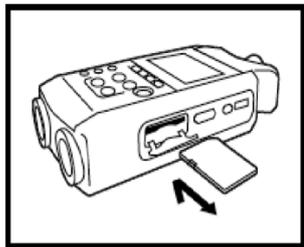

1. Make sure the Power is OFF.
2. Remove SD card into the SD card slot.

2. Powering on and off the device

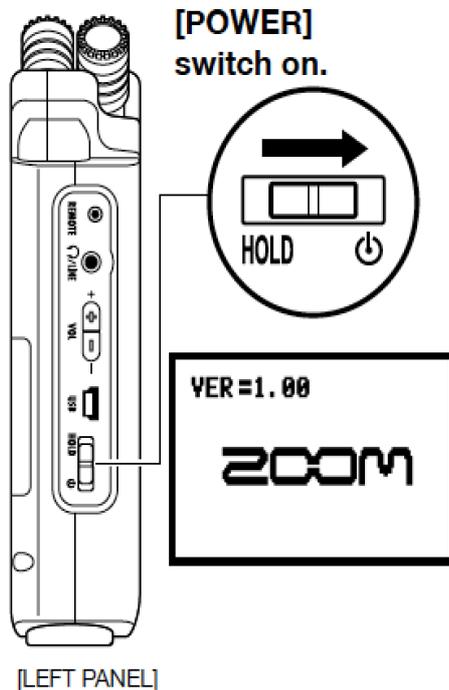

[POWER]
switch on.

To power on and off the recorder, pull the switch to the left and hold until you see the Zoom logo appear on the screen.

[LEFT PANEL]


3. Factory Reset



1 Press.




2 Select <SYSTEM> and press.

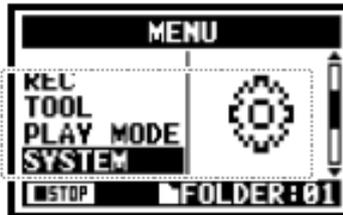


3 Select <FACTORY RESET> and press.



4 Select <YES> and press.

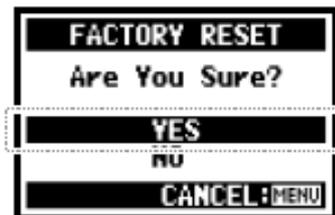


4. Formatting the SD card

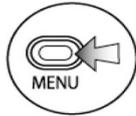


1 Press.



2 Select <SD CARD> and press.

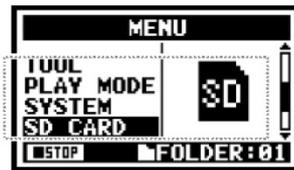

3 Select <FORMAT> and press.

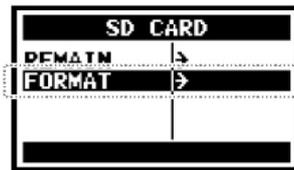

4 Select <YES> and press.



5. Recording Settings

1 Press.

2 Select <REC> and press.

3 Select <REC FORMAT> and press.

4 Select one and press.


"Short cut"
Pressing TRACK 4 on the top screen.

REC SETTING
REC FORMAT 44.1/16
AUTO REC →
PRE REC OFF
FILE NAME DEFAULT
FOLDER: 01


REC FORMAT
WAV44.1kHz/16bit
WAV44.1kHz/24bit
WAV48kHz/16bit
WAV48kHz/24bit
CANCEL: MENU

Record Setting: WAV48kHz / 24bit


6. Device Modes

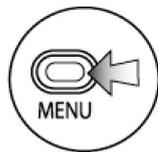

1 Press.

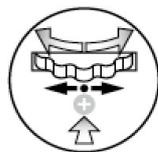

2 Select <MODE> and press.

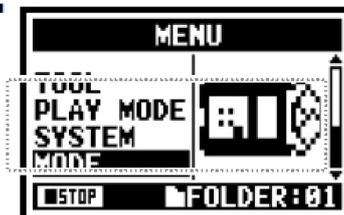


3 Select among STEREO, 4CH and MTR modes and press.




*To engage STAMINA mode, use the switch located in the battery compartment.


Note: You can quickly check the current mode by referring to the MODE Indicator lights.

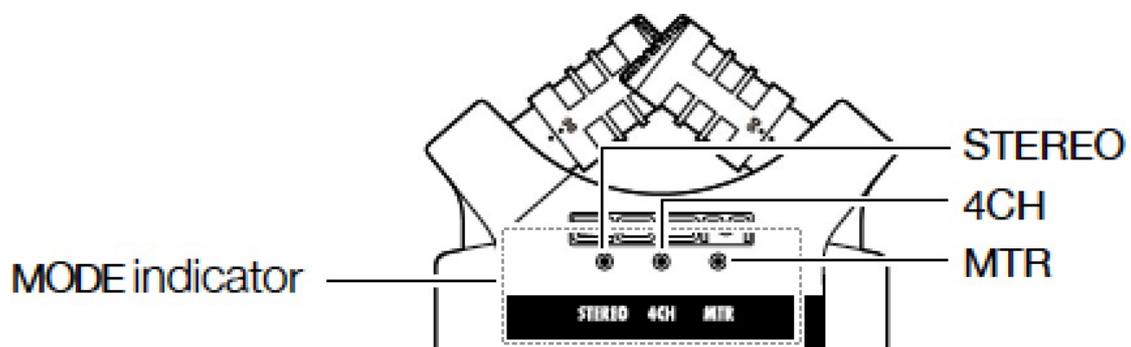

7. Built-in Microphone

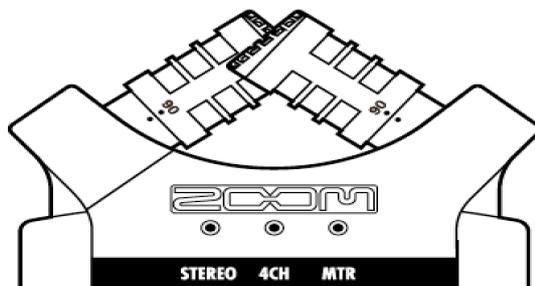

DIRECTIVITY OF 90°, 120°

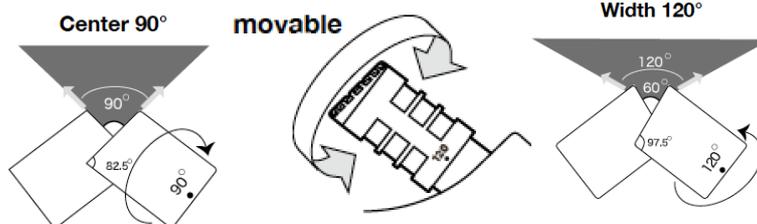

8. Playback

- 
1 Press.
 
- 
2 Select <FILE> and press.

MENU

FOLDER	[Icon]
FILE	[Icon]
INPUT	[Icon]
REC	[Icon]
[STOP]	FOLDER:01

"Short cut"
Pressing TRACK [2]
on the top screen.
- 
3 Select an optional file and press.

FILE MENU


STE-000. WAV
STE-001. WAV
STE-002. WAV
STE-003. MP3
FOLDER:01


▶ <FILE> operation to here is the same


9. Connecting Shotgun Mic


- Connect the external microphone in one of the input


10. Setting up Phantom Power in Zoom H4nPro

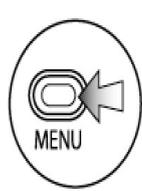
 **1**
Press.

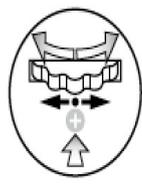 **2**
Select <INPUT> and press.

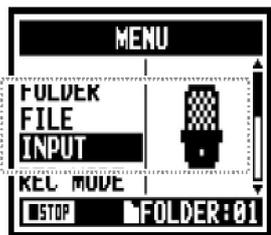

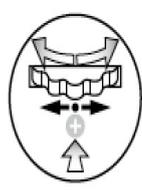 **3**
Select <PHANTOM> and press.

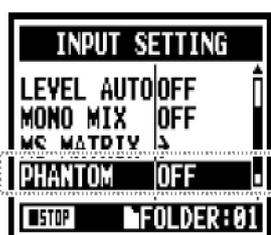

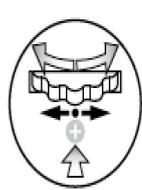 **4**
Select the voltage and press.



11. Recording



Press REC once and it will blink, allowing you to check audio levels before recording.

Press REC again to start recording.